


KEA
ELECTRIC TOWEL RADIATOR

SIMPLIFIED USER MANUAL

CONTROL BOX

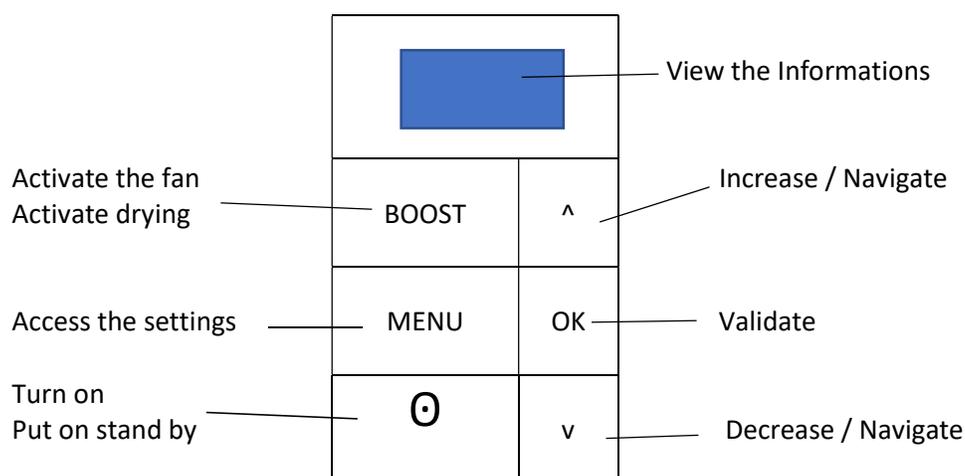

1. I USE MY DEVICE FOR THE FIRST TIME

When switching on for the first time, to access the language setting, press ^ and "MENU" for 3 seconds. Then press ^ to select the language and validate with "OK".

To set the date and time on your device, press twice "MENU".

2. I PROGRAM MY DEVICE

The programming allows you to adapt the temperature of the room to your lifestyle. You can adjust the temperature according to the periods of presence (COMFORT mode) and absence (ECO mode) in your bathroom.

COMFORT mode: for a pleasant ambient temperature in your room. The temperature is preset at 19 ° C.

ECO mode: lowers the temperature of your room during a prolonged absence (between 2 and 24 hours) from home or at night. The temperature is reduced by 3.5 °C comparing to the COMFORT temperature.



I PROGRAM MY DEVICE

- To program

You can program your temperature periods COMFORT or ECO:

- Use the existing pre-program (Monday to Sunday, COMFORT periods are preset from 6 a.m. to 10 a.m. and from 6 p.m. to 10 p.m.).

- Create your own program with up to 3 COMFORT temperature ranges each day.

- To modify the programming

Press once "MENU", then press ^, select "OUI" (YES) and confirm with "OK".

The day of the week and the time will flash, validate. Then, the hour set will flashe, use the arrows ^ and v to choose your COMFORT and ECO periods, then validate with "OK".

Repeat for every hour and every day of the week.

3. I USE THE BOOST FUNCTION

The BOOST function speeds up the heating of the bathroom and the towels.

To start the BOOST, press once on "Boost", you can then choose the duration of the BOOST (10, 20, 30, 40, 50 or 60 minutes) with the arrows ^ and v, and validate by pressing "OK".

4. I USE THE TOWEL DRYING FUNCTION

This mode allows you to dry your towels and keep them warm for use.

To activate it, press twice on "Boost".

You can choose the drying time (30, 60, 90, 120 minutes) with the arrows ^ and v.

5. I LOCK THE CONTROLS

To lock the controls, simultaneously press the arrows ^ and v for 3 seconds.

To unlock, repeat the same operation.